

L

R

STEP2

x8

M4X16

STEP4/5


x8


M5X6

STEP9/11

x8


M4X16

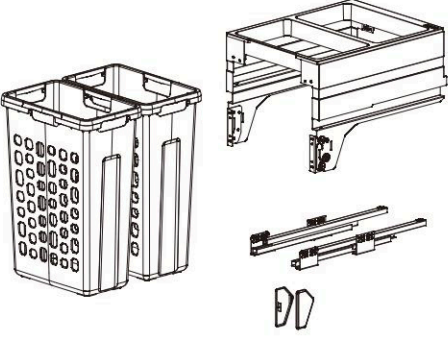

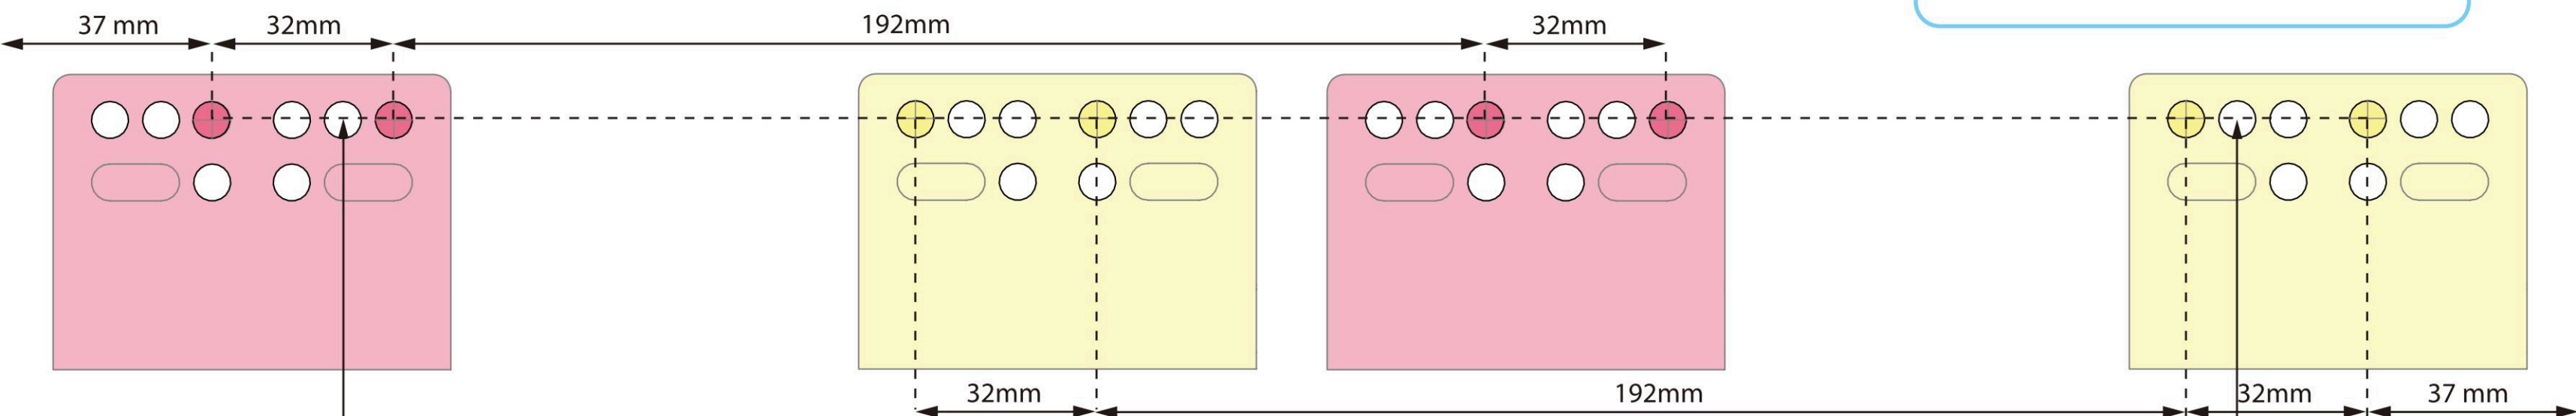

1


x8

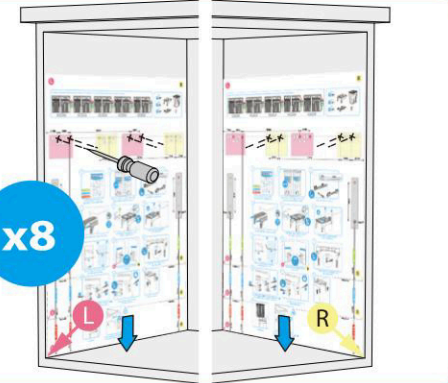

Measure from bottom edge of cabinet and use template to mark holes with awl.


2

x8

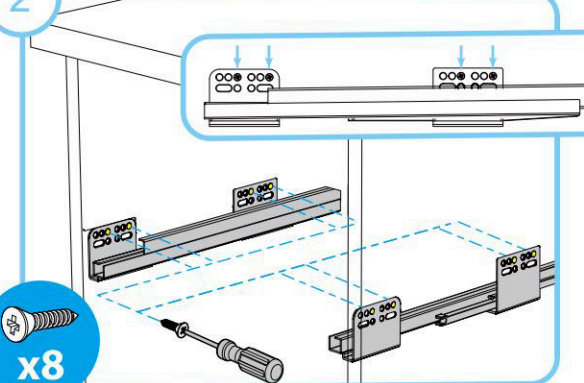

Drill and screw lower runners.


3

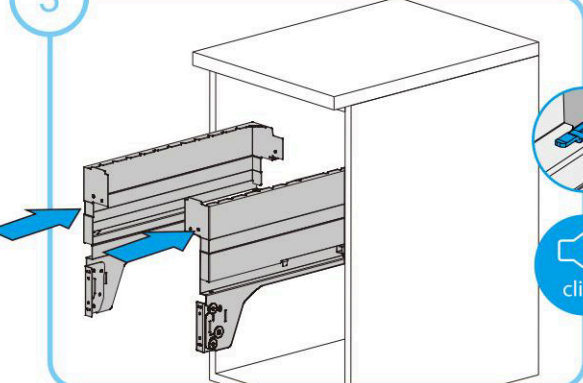

Install metal brackets. Makes click sound.

4


x4

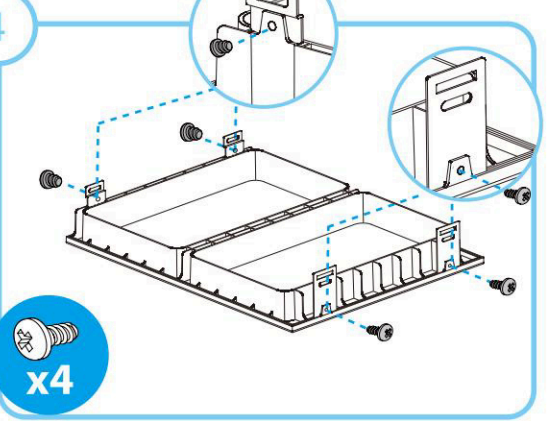

Screw metal brackets to the plastic tray


5

x4

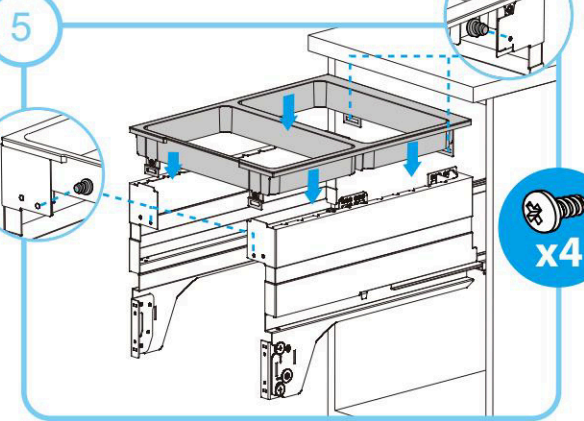


Install plastic tray loosely with screws, allowing for adjustment.

6

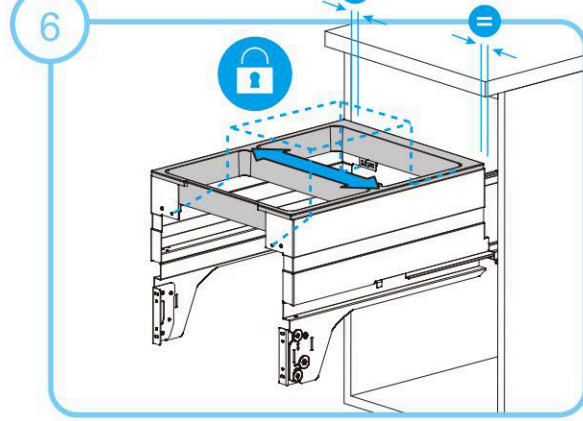

Adjust plastic tray position, tighten screws when parallel.


7

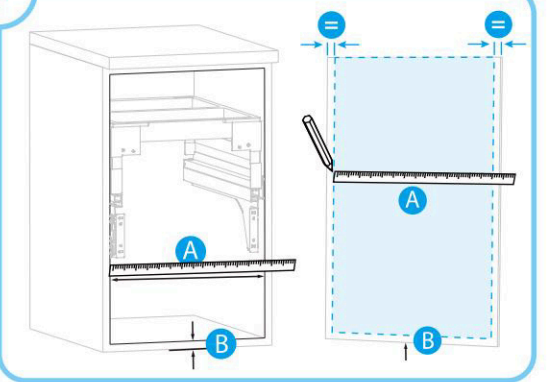

Measure and mark the cabinet bottom and side edge on the door.

8


x4

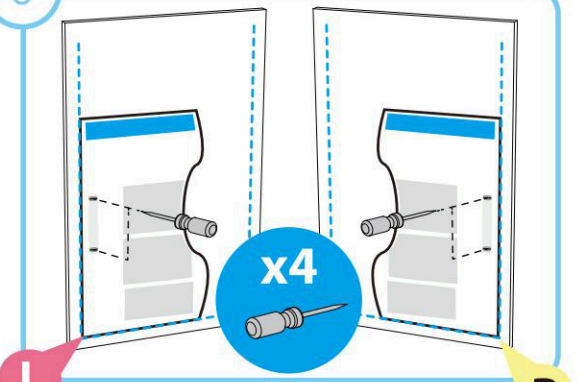

Use template to mark bracket holes on the door.


9

x4

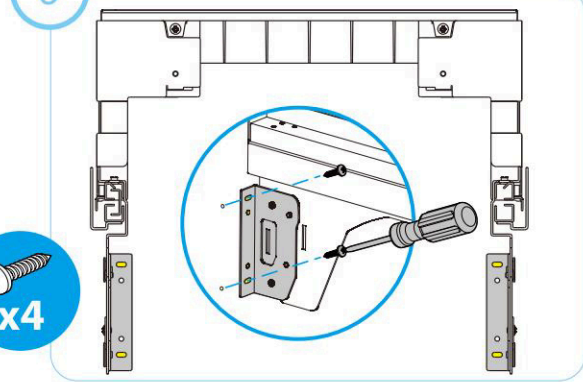

Screw door arms to cabinet using the slotted holes.


10

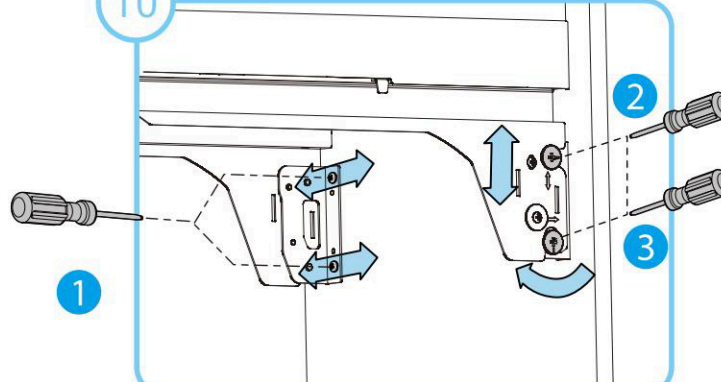

Adjust left and right 1 then tighten. Adjust vertical 2 and tilt 3


11

x4

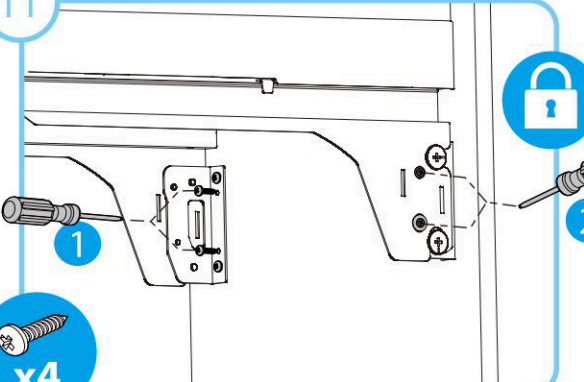


Screw the front bracket to the door. Lock vertical and tilt adjustment

12

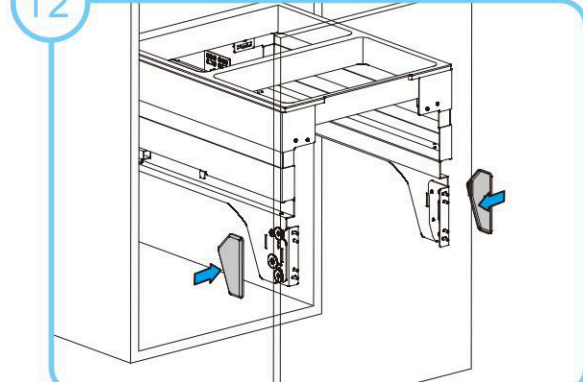


Install screw covers.

13

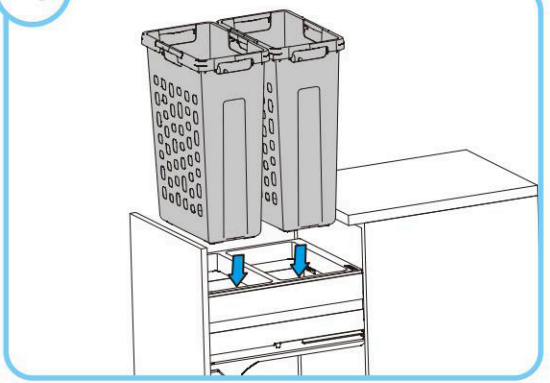

laundry/ies

14

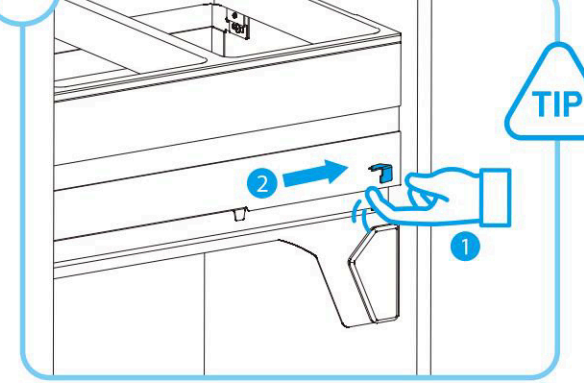

To release brackets from the runners, click switch on the sides of the brackets and slide out

85 mm

29 mm

233 mm

400 mm

85 mm

29 mm

233 mm

400 mm

L

R