


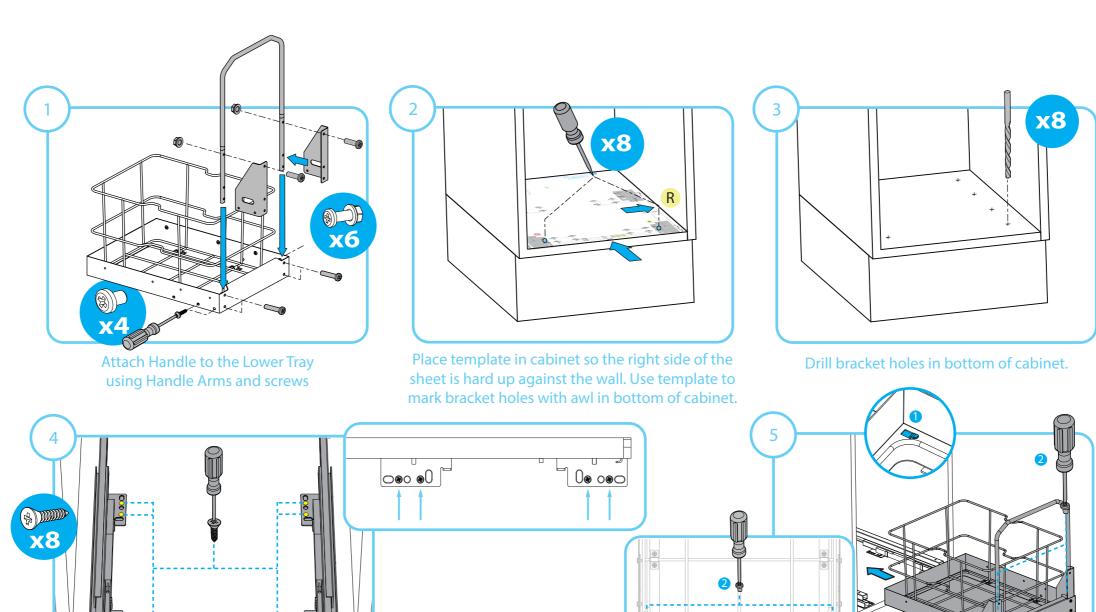





 \bigcirc

(



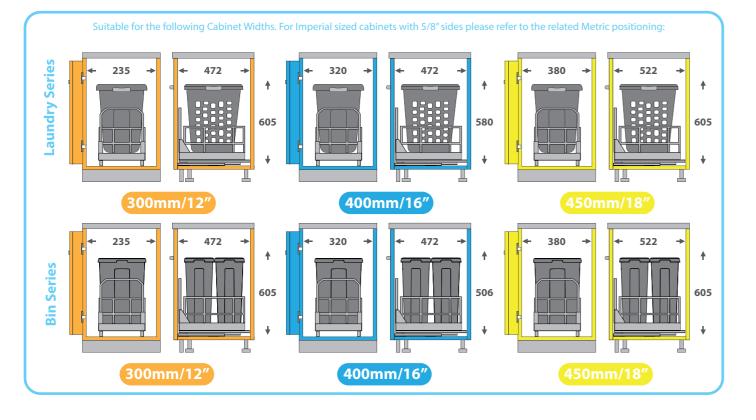


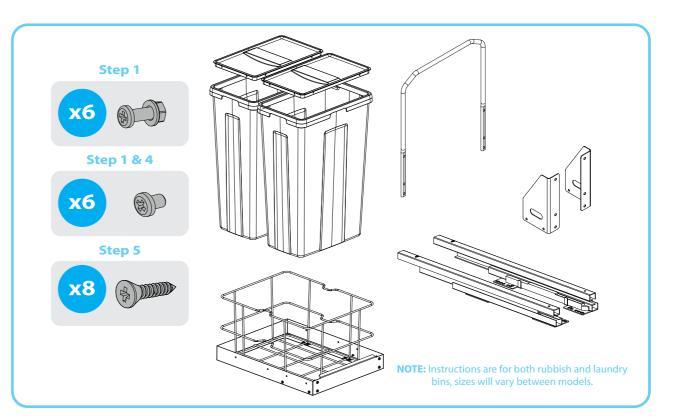





Screw brackets to bottom of cabinet.




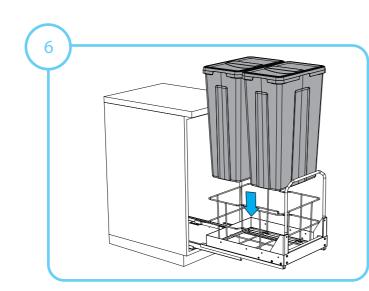

Install bin/s

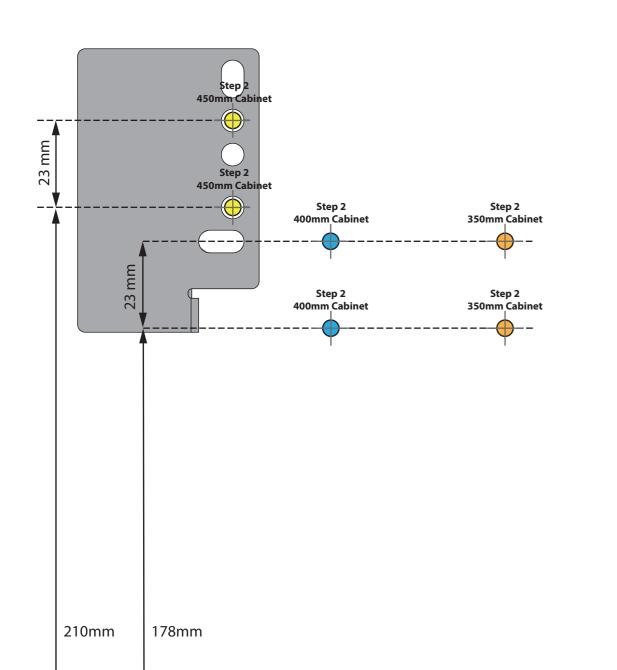

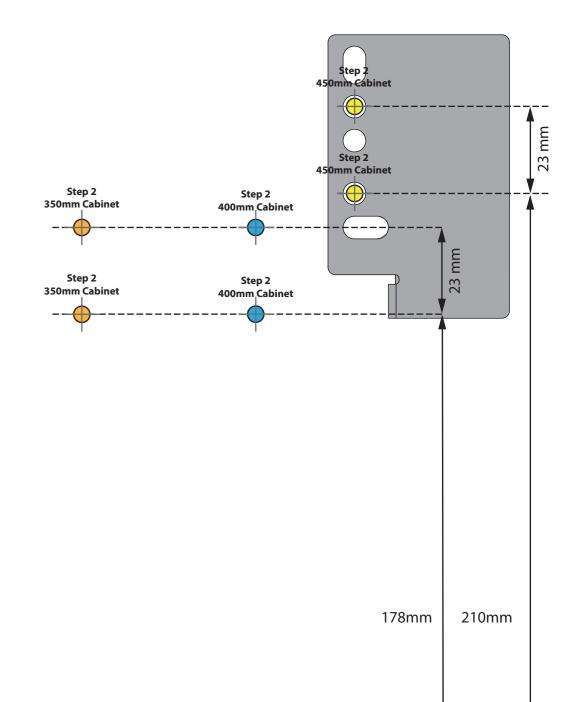

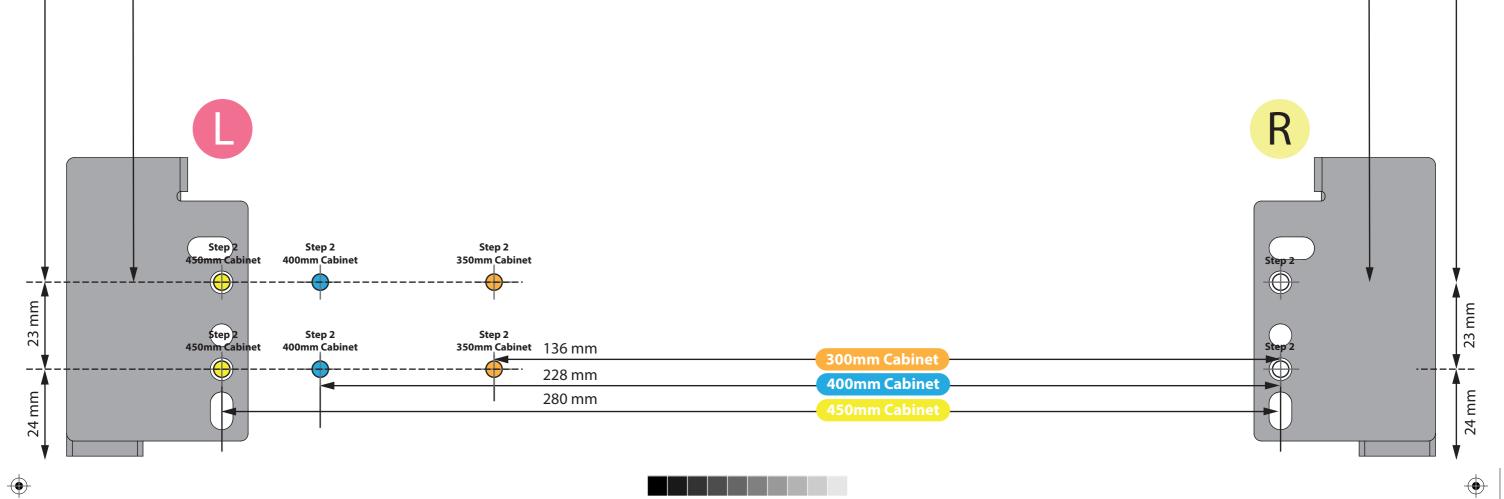

 \bigcirc

۲