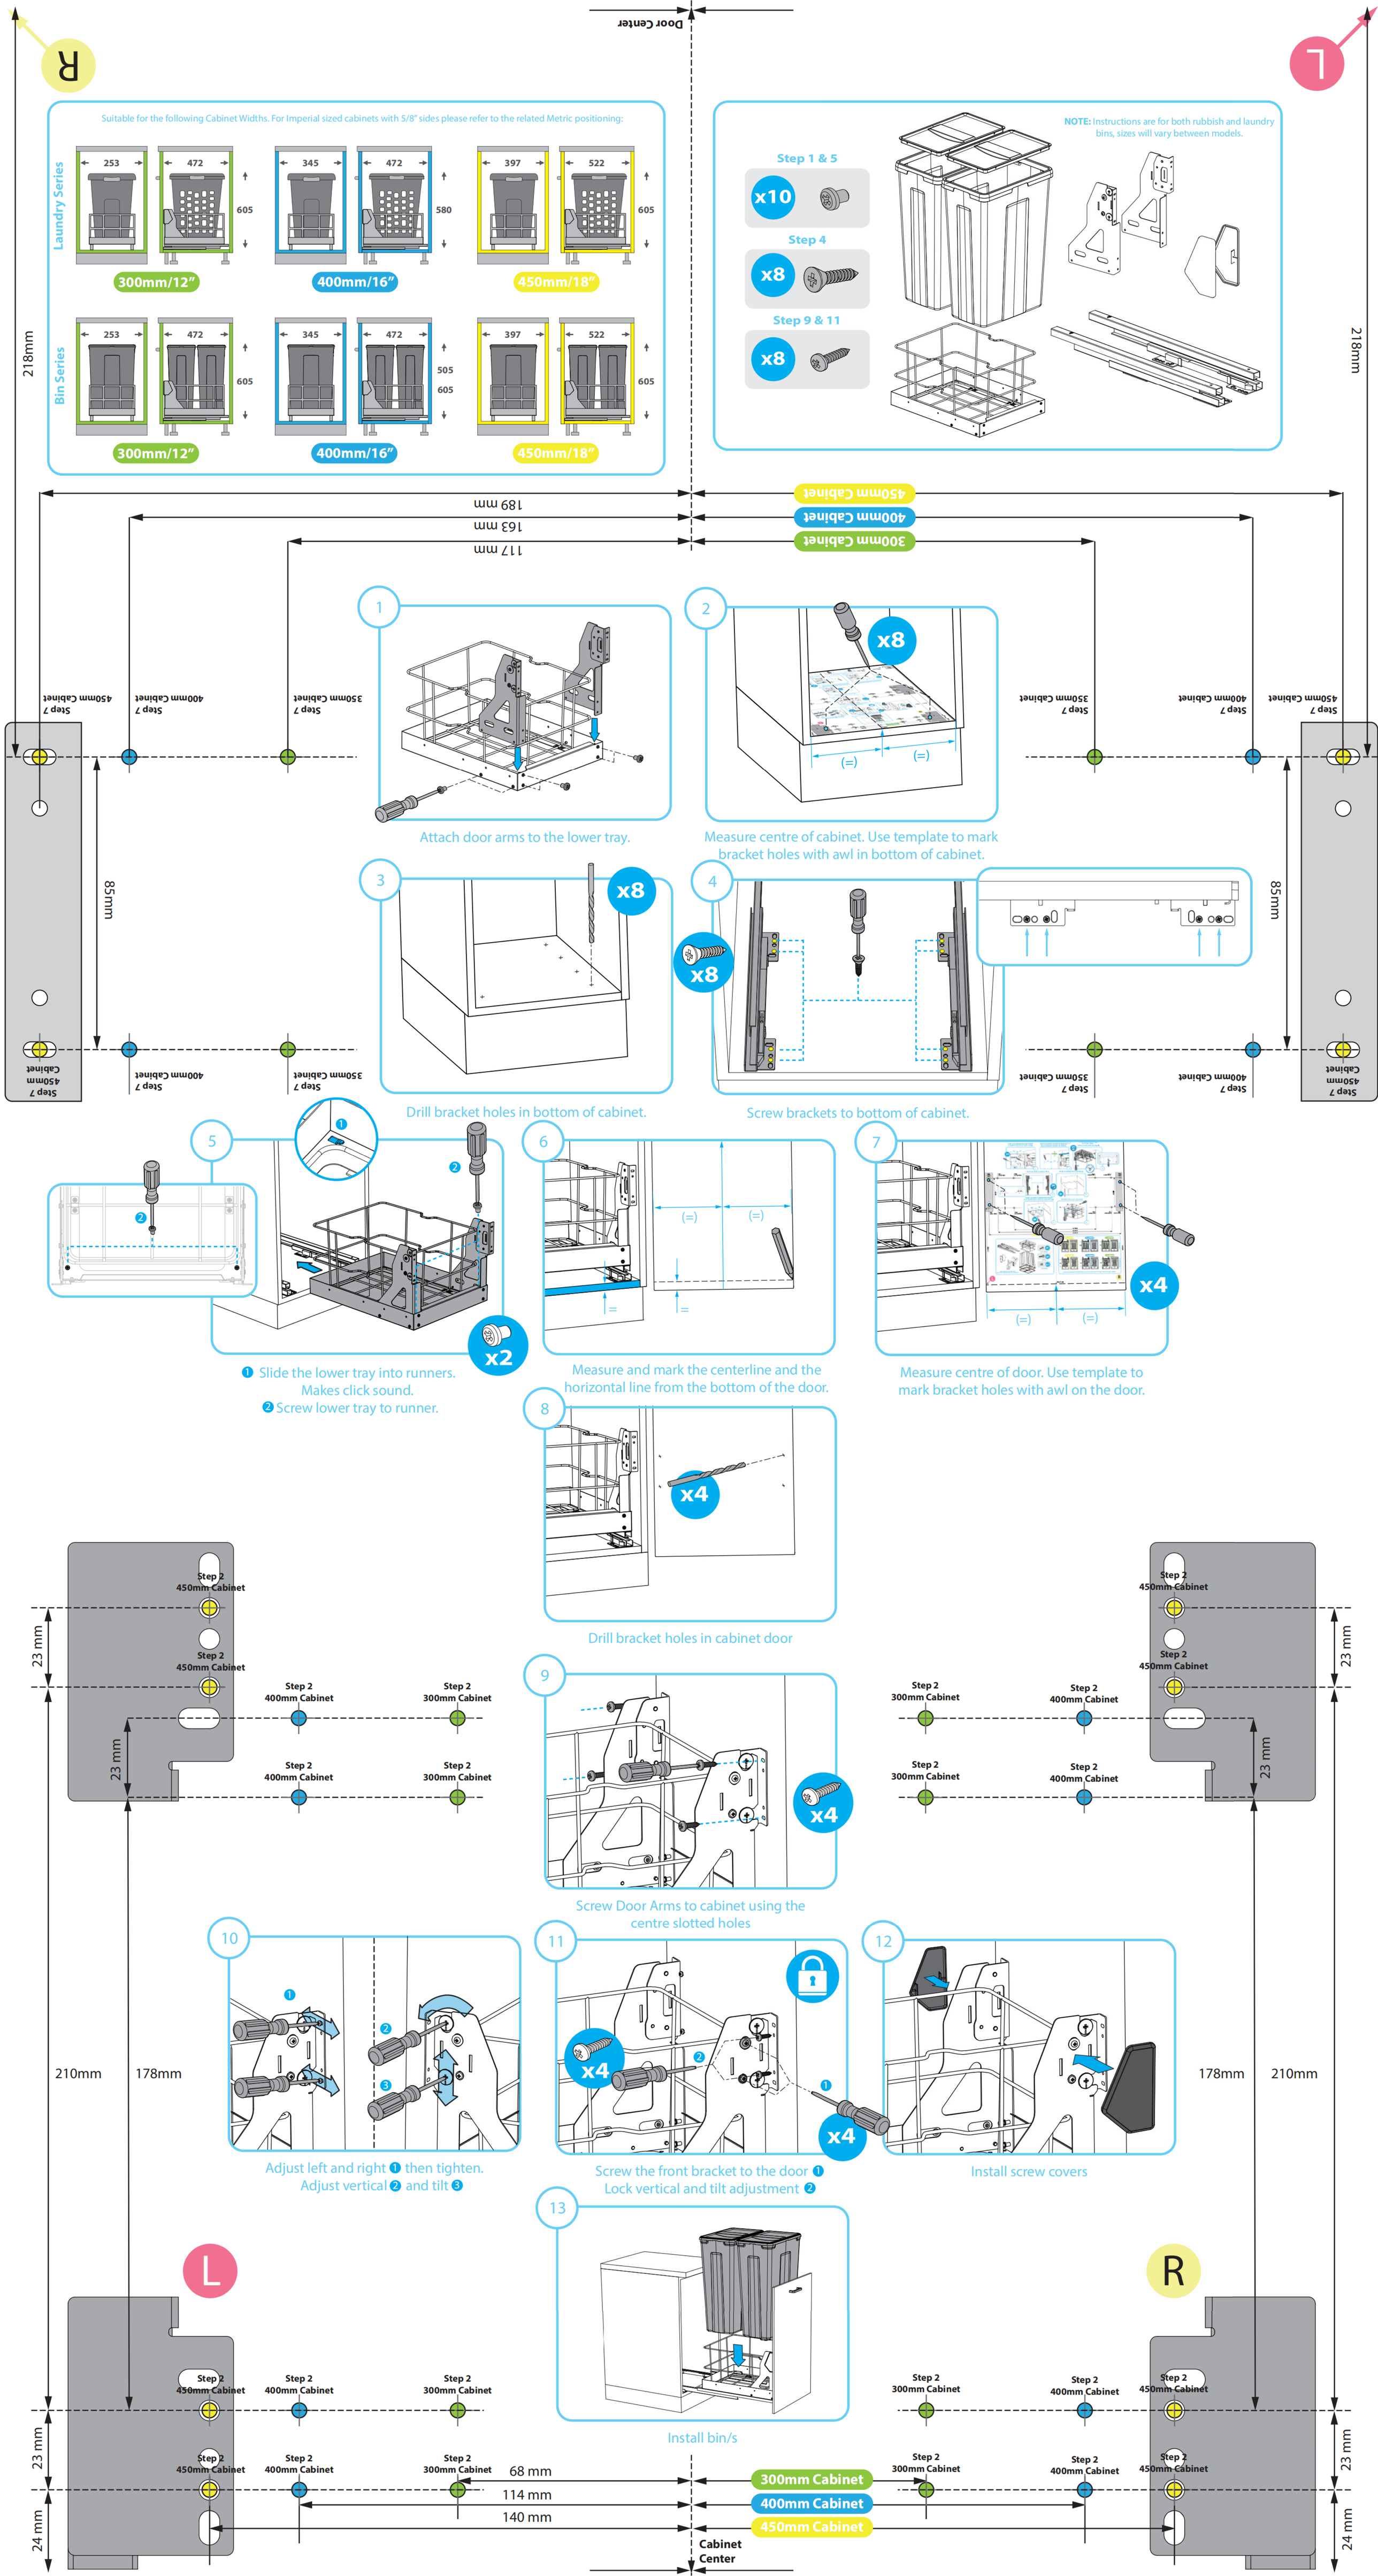
Door Center
R
L
Suitable for the following Cabinet Widths. For Imperial sized cabinets with 5/8" sides please refer to the related Metric positioning:
Laundry Series
Bin Series
253
472
345
397
522
605
580
505
300mm/12"
400mm/16"
450mm/18"
NOTE: Instructions are for both rubbish and laundry bins, sizes will vary between models.
Step 1 & 5
x10
Step 4
x8
Step 9 & 11
x8
218mm
189 mm
163 mm
117 mm
450mm Cabinet
400mm Cabinet
300mm Cabinet
Step 7
85mm
1
Attach door arms to the lower tray.
2
x8
(=)
Measure centre of cabinet. Use template to mark bracket holes with awl in bottom of cabinet.
3
x8
Drill bracket holes in bottom of cabinet.
4
x8
Screw brackets to bottom of cabinet.
5
x2
❶ Slide the lower tray into runners. Makes click sound.
❷ Screw lower tray to runner.
6
Measure and mark the centerline and the horizontal line from the bottom of the door.
7
x4
Measure centre of door. Use template to mark bracket holes with awl on the door.
8
x4
Drill bracket holes in cabinet door
Step 2
450mm Cabinet
400mm Cabinet
300mm Cabinet
23 mm
9
x4
Screw Door Arms to cabinet using the centre slotted holes
10
Adjust left and right ❶ then tighten.
Adjust vertical ❷ and tilt ❸
11
x4
x4
Screw the front bracket to the door ❶
Lock vertical and tilt adjustment ❷
12
Install screw covers
210mm
178mm
13
Install bin/s
24 mm
68 mm
114 mm
140 mm
Cabinet Center